

 
Owner's Manual

Owner's Manual


All-in-one Audio Player

All-in-one Audio Player

Agent




NAMES OF AND THEIR FUNCTIONS

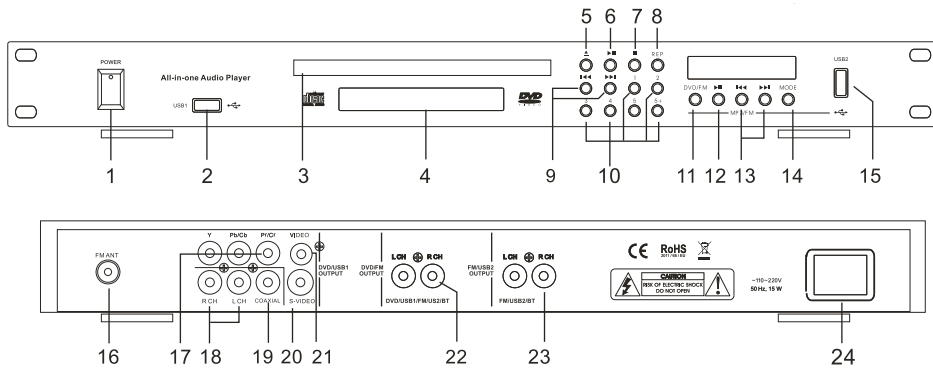

- | | |
|---|--|
| <p>1 POWER KEY</p> <p>2 DVD U disk 1 input interface</p> <p>3 DVD Disc Compartment.</p> <p>4 LED Functional Display Screen</p> <p>5 DVD OPEN/CLOSE KEY</p> <p>6 DVD/USB1 PLAY/PAUSE KEY</p> <p>7 DVD/USB1 Stop KEY.</p> <p>8 DVD/USB1 Repeat KEY.</p> <p>9 DVD/USB1 CH-/+ KEY.</p> <p>10 DVD/USB1 CH(0-5/5+) KEY.</p> <p>11 DVD/FM OUTPUT SELECT KEY.
DVD/USB1 and MP3/FM/BT
Output can be selected.
LED Display Light up DVD Character
When dvd/usb1 output</p> <p>12 USB2/BT play/pause key
Press the FM time to enter the status
Of automatic platform selection! It
Will automatically select the platform
And save it automatically. After</p> | <p>Choosing the power, it can be
selected and played by CH-/+ button.</p> <p>13 USB2/FM/BT CH-/+ KEY</p> <p>14 Play Mode Select key.
USB2/FM/BT play select KEY</p> <p>15 U disk 2 input interface</p> <p>16 FM antenna input terminal</p> <p>17 DVD Y Pb/Cb Pr/Cr output</p> <p>18 DVD/USB1 audio output</p> <p>19 DVD/USB1 COAXIAL output</p> <p>20 DVD/USB1 S-VIDEO output</p> <p>21 DVD/USB1 CVBS output</p> <p>22 DVD/USB1/FM/USB2/BT OUTPUT
DVD/USB1 and MP3/FM/BT
Output can be selected.
LED Display Light up DVD Character
When dvd/usb1 output</p> <p>23 FM/USB2/BT AUDIO OUTPUT</p> <p>24 AC ~110-220V 50Hz input</p> |
|---|--|

NAMES OF AND THEIR FUNCTIONS

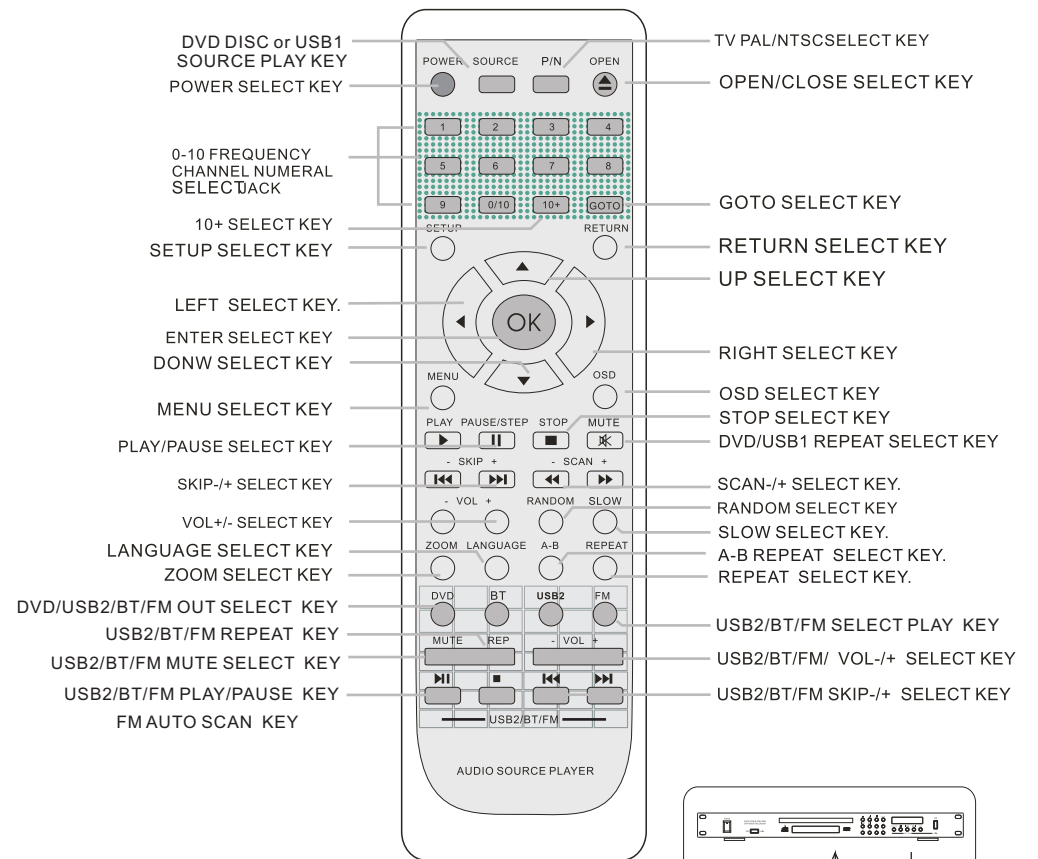

- | | |
|--|--|
| <p>1 DVD DISC or USB1 SOURCE PLAY KEY</p> <p>2 POWER SELECT KEY</p> <p>3 0-10 FREQUENCY CHANNEL NUMERAL SELECT KEY</p> <p>4 10+ SELECT KEY</p> <p>5 SETUP SELECT KEY</p> <p>6 LEFT SELECT KEY.</p> <p>7 ENTER SELECT KEY</p> <p>8 DOWN SELECT KEY</p> <p>9 MENU SELECT KEY</p> <p>10 PLAY/PAUSE SELECT KEY</p> <p>11 SKIP-/+ SELECT KEY</p> <p>12 VOL+/- SELECT KEY</p> <p>13 LANGUAGE SELECT KEY</p> <p>14 ZOOM SELECT KEY</p> <p>15 DVD/USB2/BT/FM OUT SELECT KEY</p> <p>16 USB2/BT/FM REPEAT KEY</p> <p>17 USB2/BT/FM MUTE SELECT KEY</p> <p>18 USB2/BT/FM PLAY/PAUSE KEY</p> <p>19 FM AUTO SCAN KEY</p> | <p>20 TV PAL/NTSCSELECT KEY</p> <p>21 OPEN/CLOSE SELECT KEY</p> <p>22 GOTO SELECT KEY</p> <p>23 RETURN SELECT KEY</p> <p>24 UP SELECT KEY</p> <p>25 RIGHT SELECT KEY</p> <p>26 OSD SELECT KEY</p> <p>27 STOP SELECT KEY</p> <p>28 DVD/USB1 REPEAT SELECT KEY</p> <p>29 SCAN-/+ SELECT KEY.</p> <p>30 RANDOM SELECT KEY</p> <p>31 SLOW SELECT KEY.</p> <p>32 A-B REPEAT SELECT KEY.</p> <p>33 REPEAT SELECT KEY.</p> <p>34 USB2/BT/FM SELECT PLAY KEY</p> <p>35 USB2/BT/FM VOL-/+ SELECT KEY</p> <p>36 USB2/BT/FM SKIP-/+ SELECT KEY</p> |
|--|--|

RENEWAL THE BATTERY

