## 立方RTK蓝牙差分使用指南

## Bluetooth GNSS使用方法

## 1)、打开手机蓝牙,搜索设备,连接设备;

2)、打开Bluetooth GNSS 2,点击设置,Settings界面点击Selet...,选中设备,点击Save



## 3)、返回首页,点击屏幕右下角蓝牙连接按钮,连接成功后, Connect页面显示经纬度和连接状态, RTK/NTRIP页面显示服务器连接状态和收到NTRIP数据句数量

Bluetooth GNSS 2 🔅 :	Bluetooth GNSS 2	• •	Bluetooth GNSS 2	• ۱
Connect RTK/NTRIP	* Connect	C RTK/NTRIP	X Connect RTI	
Pre-connect checklist	GNSS Device read stats Lat: 22.7049217 Lon: 114.2435765		NTRIP Connected	
Found paired Buttooth devices Found paired Buttooth devices Target devices selected Mock Location app' is 'Bluetooth GNSS'	GNSS Time: Ellipsoidal Height: Ortiometic Height: Geoldal Height: Fix status: Fix status: Fix quality: XY Accuracy(m): HDOP:	C C C C C C C C C C C C C C C C C C C	NTRIP Server/Login filed: NTRIP Stream selected: N NTRIP packets received:	Ves RTCM33_GRCE 371
Next step Please press the floating button to connect	Course: N Gailee In use/view: N GPS In use/view: N GLONASS In use/view: N BelDou In use/view: Location sent to Android:	No data 9 5/7 No data / 4 3 / 4 1/9 0.244 Seconds ago		
	Alt type used: N satellites used: Total GGA Count: Total RMC Count: Current log folder: Current log size (MB):	ellipsoidel 9 32 32 No data No data No data		
<u></u>	Conne	ected		

1)、打开手机蓝牙

2)、打开测量员APP——仪器界面,选择冰河RTK,进入连接RTK界面,点击扫描,选中要连接的设备,点击连接并输入0000配对。

